




This well optimized product allows the max. access to all storage area easily. 2 hydraulic pistons let's tilting and sliding the bed sequentially as shown in fig. 2&3. Special retractable arm design brings the bed to parallel position. Making the bed will be much more easier and enjoyable without bending down. Available for wide range of beds from twin to king size. This product is compatible with foldable & smart bed frames. This product is available in Black, white & Beige colors

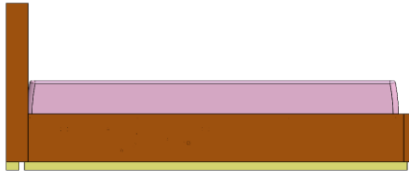

Pos.1

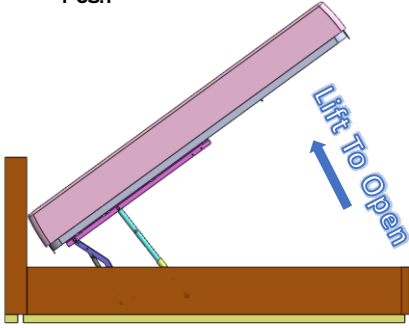

Pos.2 : Front Access Position
Ön Erişim Pozisyonu

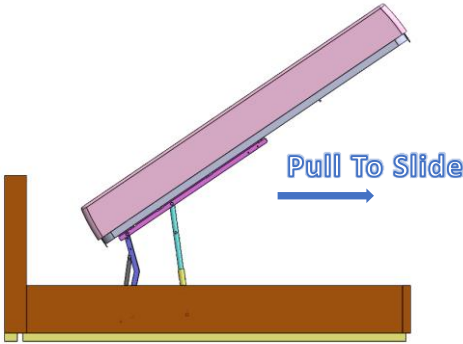

Pos.3: Front & Back access
positin Ön & Arka Erişim
Pozisyonu



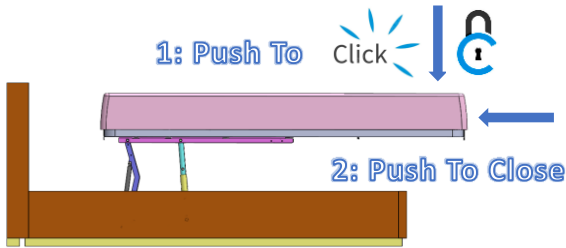


Fig.4: Making The Bed Position
Nevresim Düzeltme Pozisyonu

Main Product Code	Dynamic Load (Kg)	Mattress Weight (Kg)
A0010101	55-65	30-40
A0010102	67-85	42-60
A0010103	87-105	62-80
A0010104	107-130	82-105

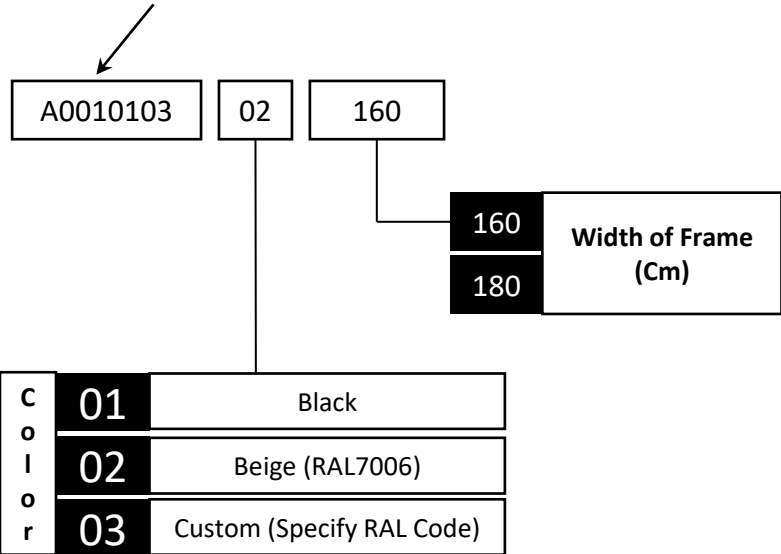


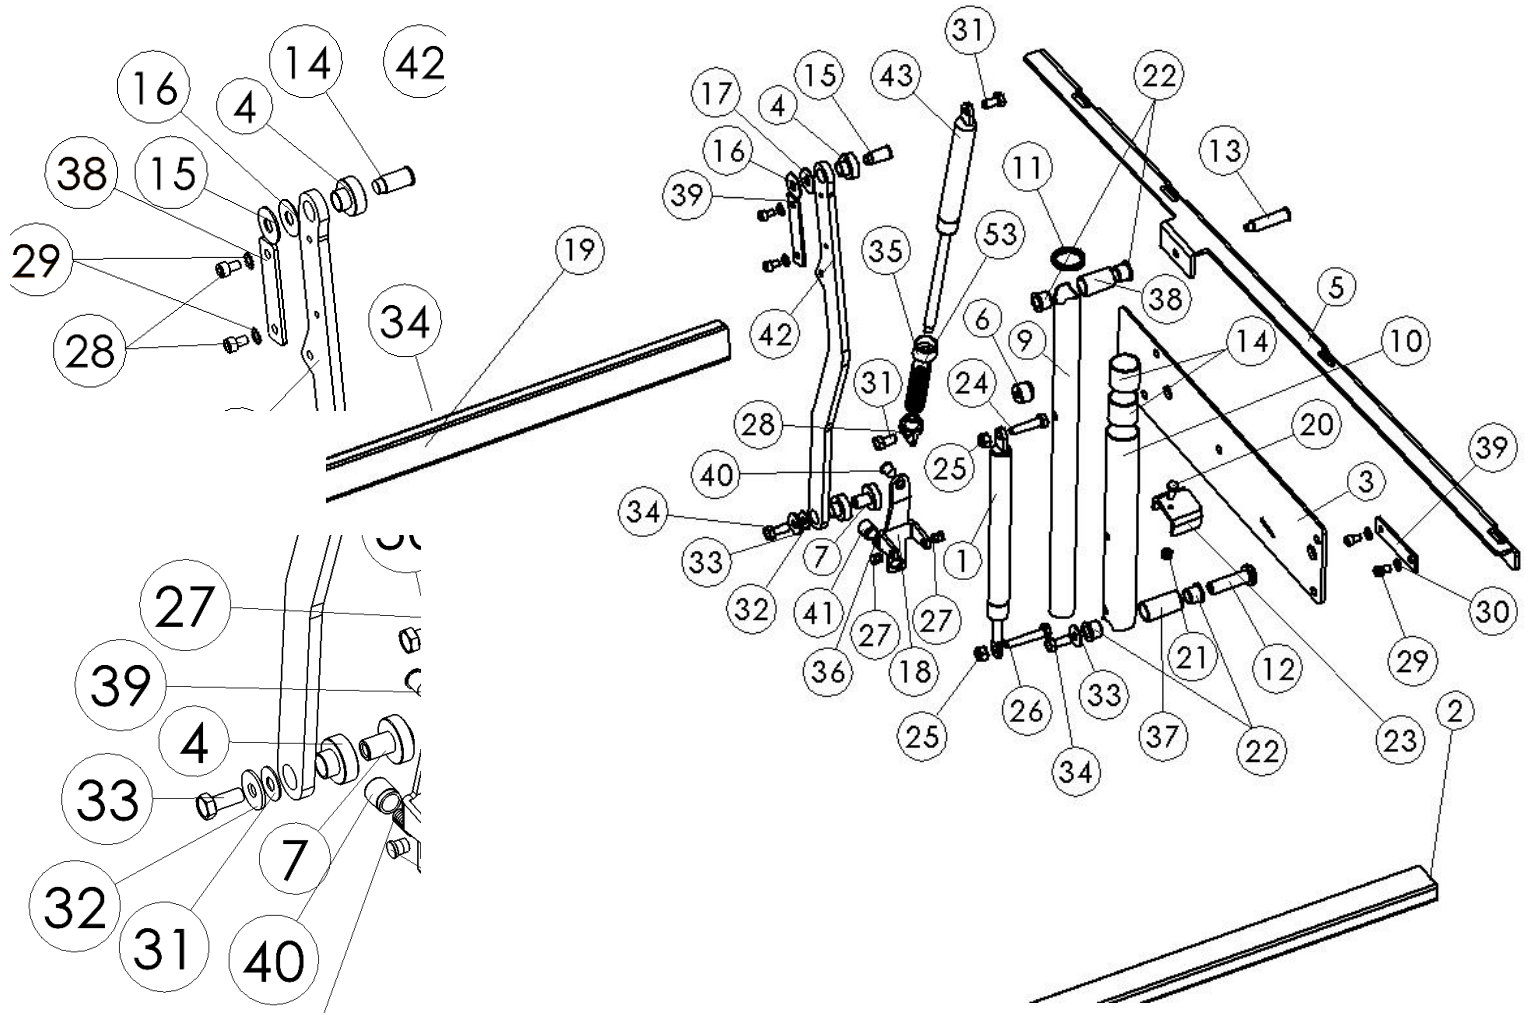


Part Number	Group Name
2,19,29,30,39	FR&RR Support Bars
18,27,36,40,41	Active Arm Retract Lock
20,21,23	Lock Release
4,6,7,15,16,17,32,33,34,42	Passive Arm Body, Bushing & Fastening
12,13,14,22,33,34	Active Arm Bushing & Fastening
9,10,11,37,38	Active Arm Body
6,28,31,35,43,53	RR Hydraulic Lifter
1,24,25,26	FR Hydraulic Lifter
3,5	Bracket

Uludag Bed Storage System

Installation Instructions

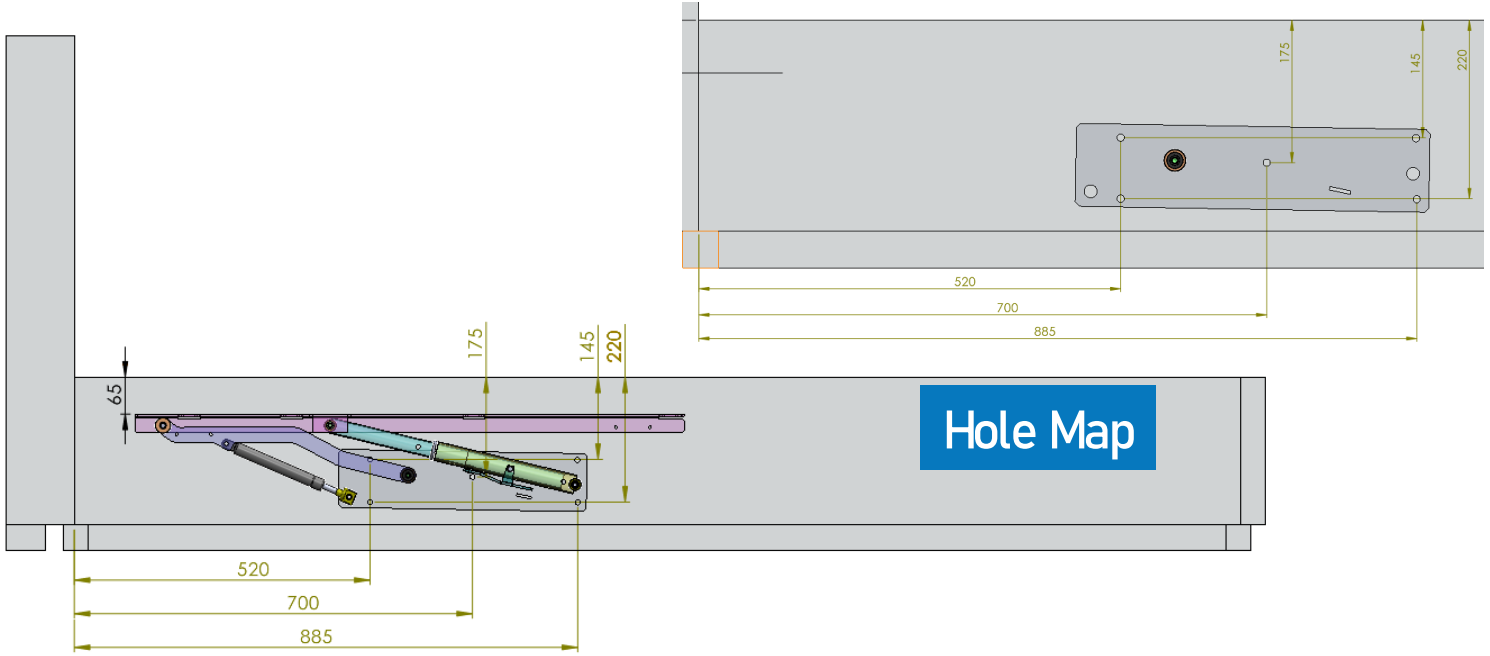


**M8x20+Plain Washer
(5 Pcs.)**

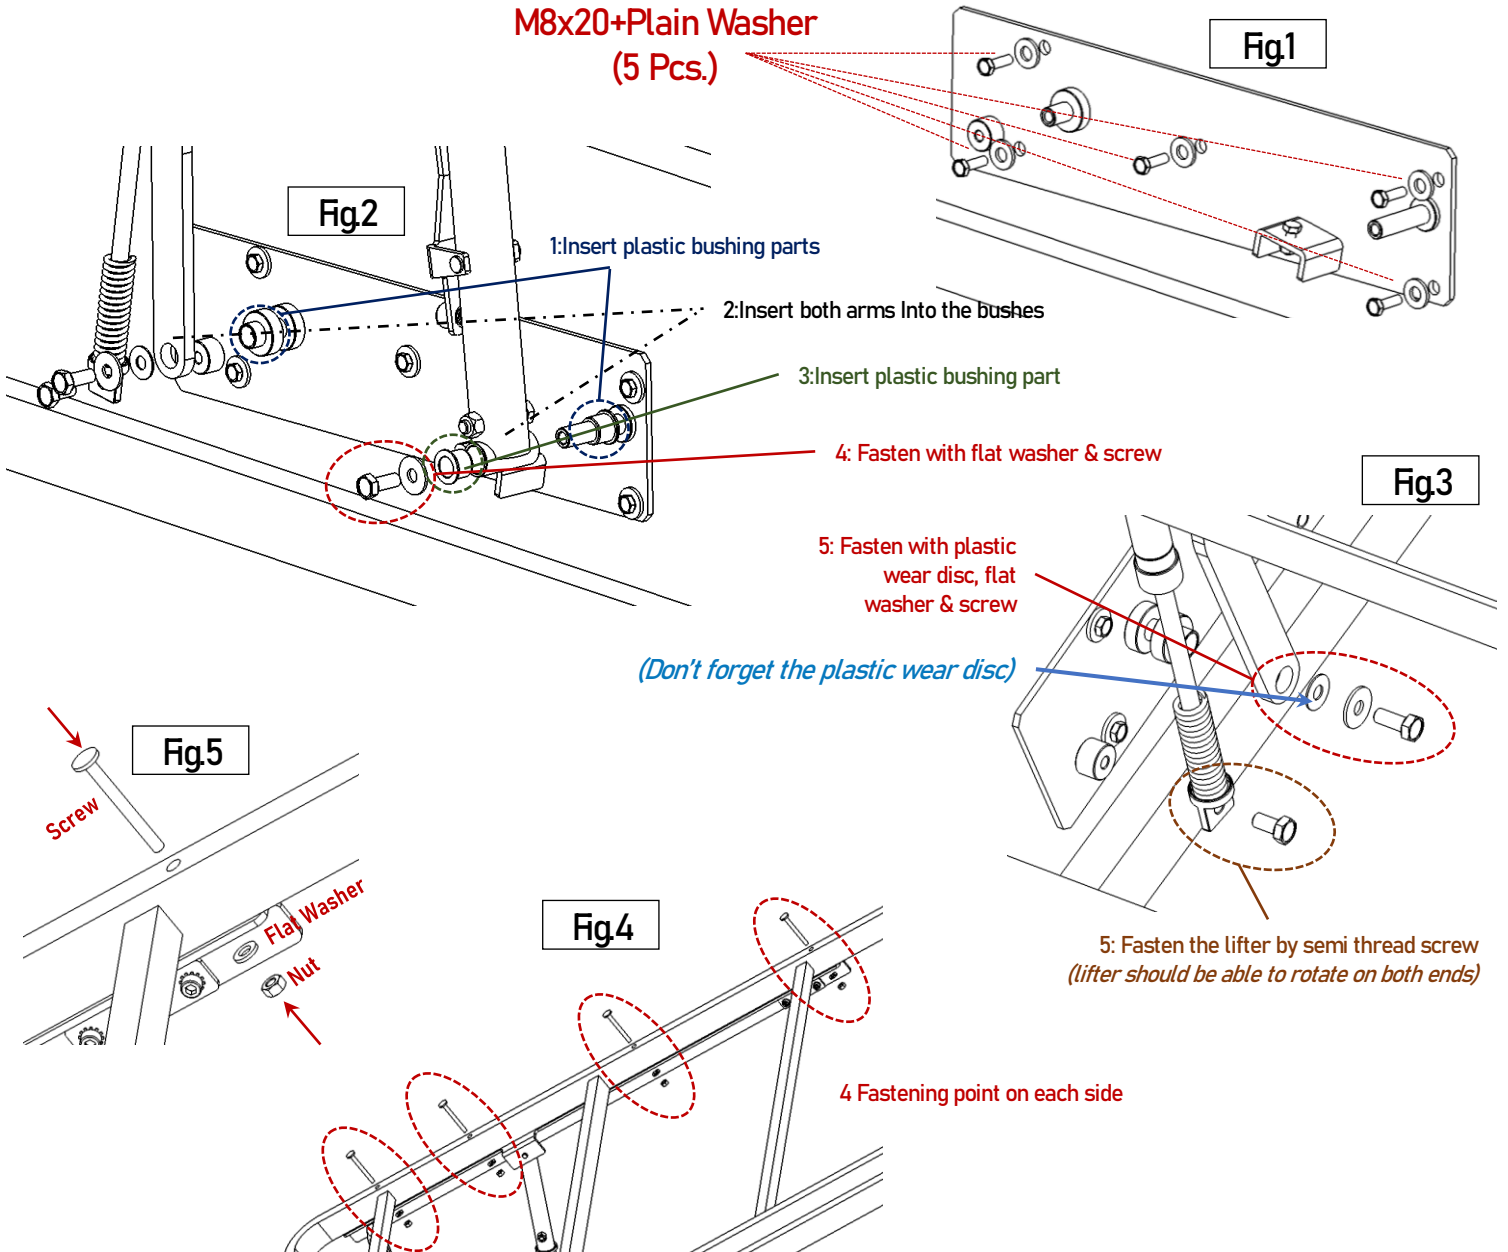



Uludag Bed Storage System

Installation Instructions


Rear Support Bar Installation

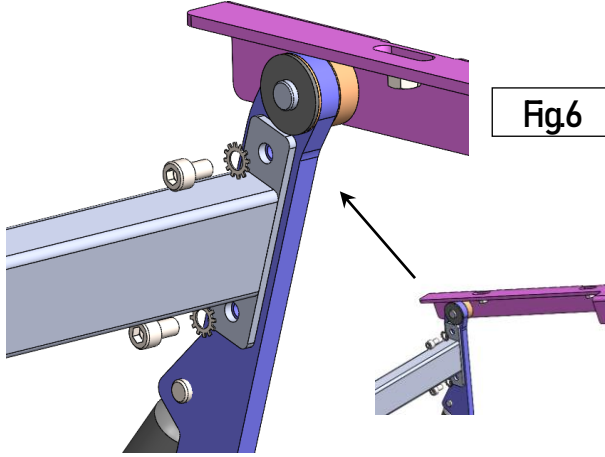

Front Support Bar Installation

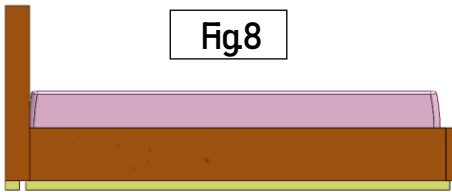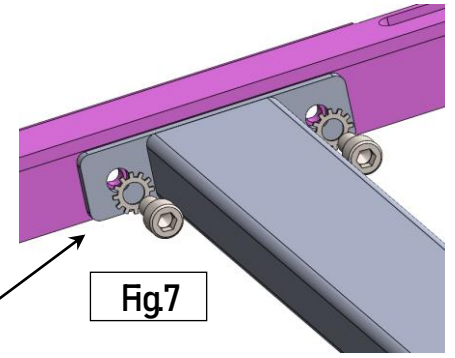

Locking Pin should be totally released from the body

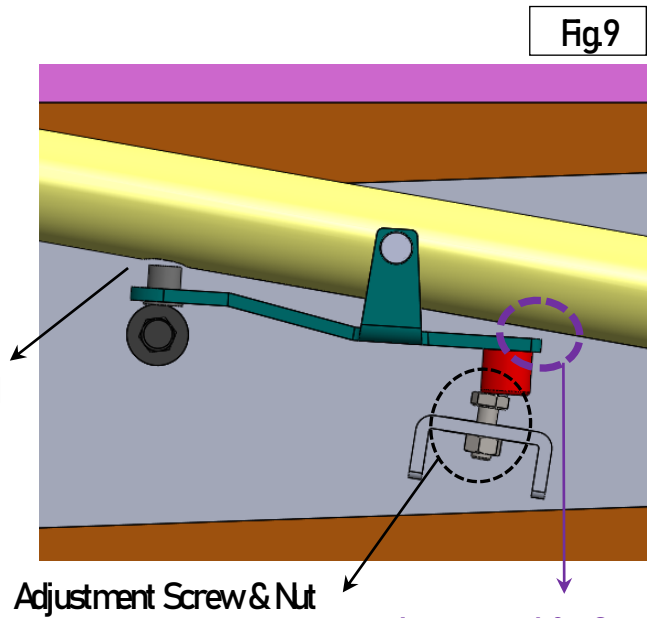


1. Fasten fixed bracket to the bed chassis side walls on both sides (Fig.1).
2. Assemble the arm bases & lifter rod the bracket (Fig. 2&3).
3. Fix the rear (RR) support bar to the passive arm (Fig.6).
4. Fix the front (FR) support bar to the fixed bracket (Fig.7).
5. Assemble the Mattress frame to the moving bracket (Fig. 4&5) and tune the back gap with head.
6. Put the mattress on bed and close the hinge to sleep position (Fig.8).
7. Check & fine adjust (if necessary) the lock mechanism (Fig.9)










Uludag Bed Storage System

Installation Instructions-Frame Hole Map

Hole Map is valid for all frame dimensions

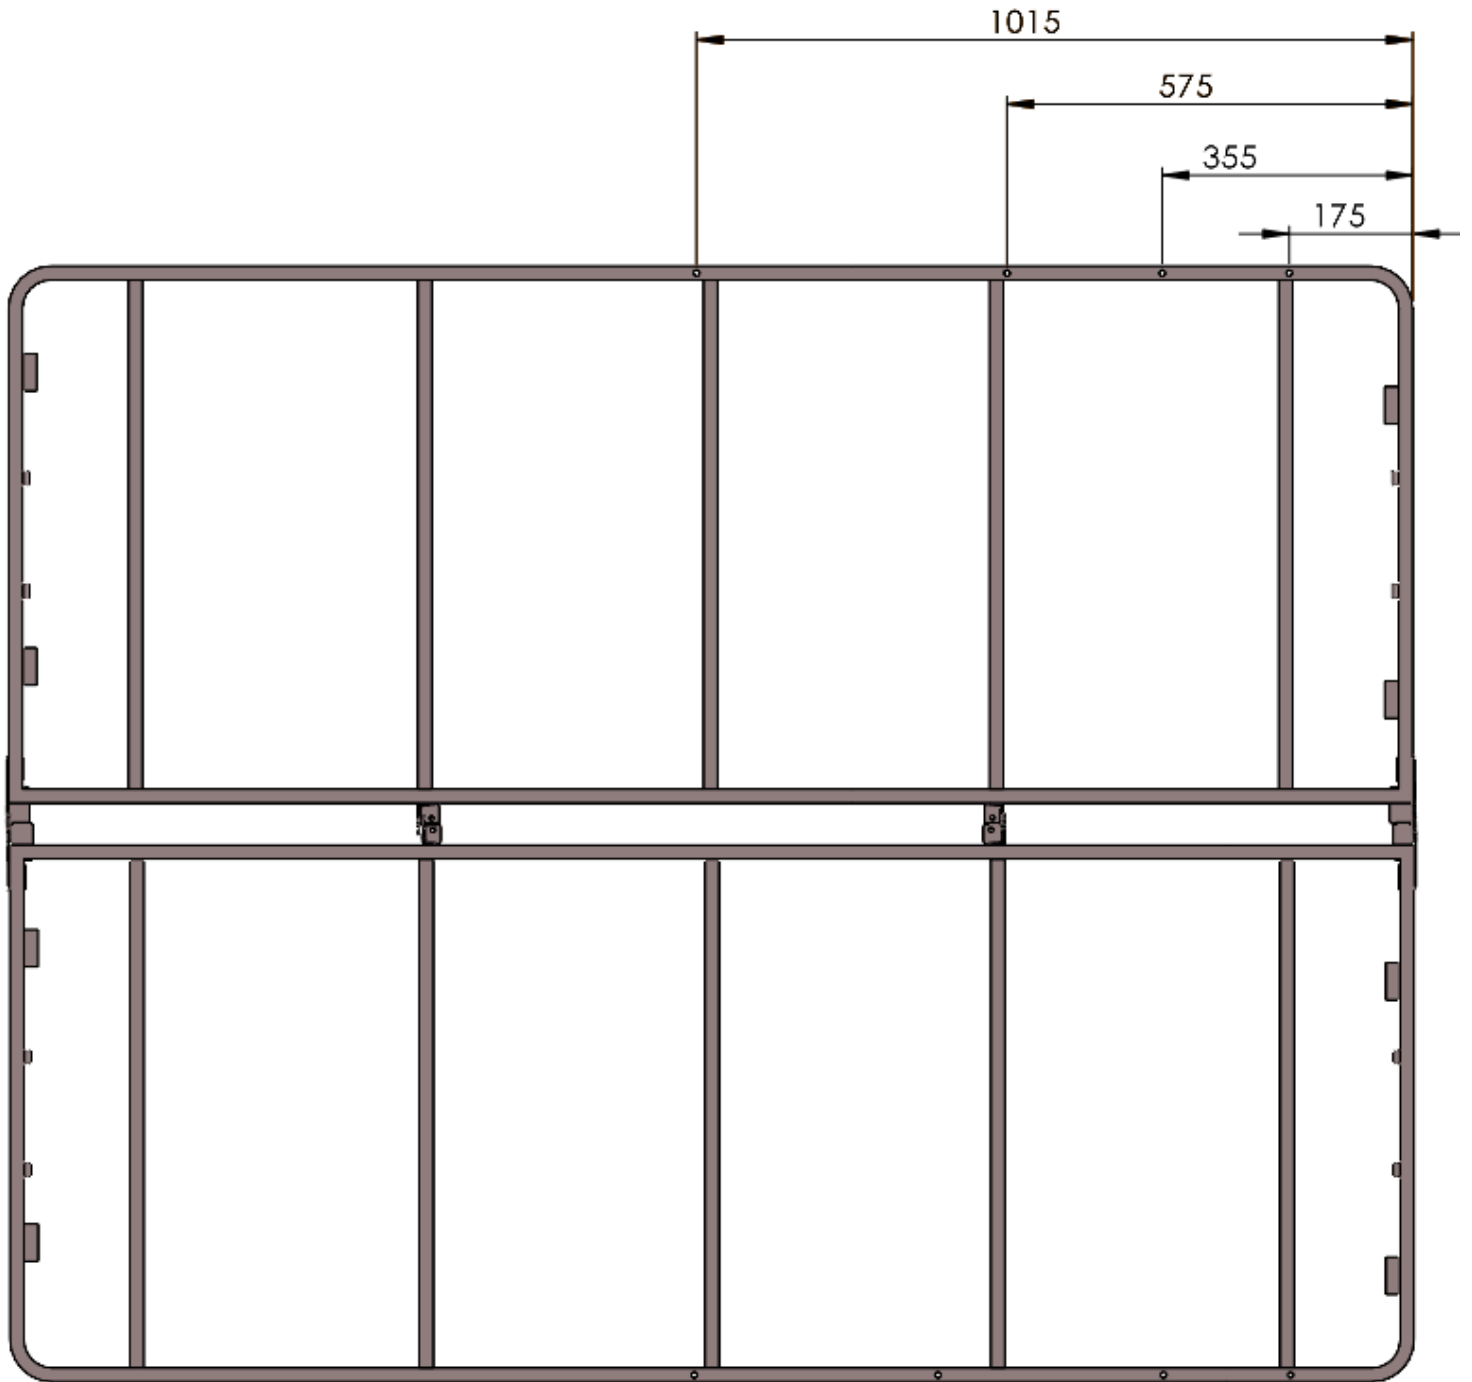

- It's highly recommended to follow the assembly instruction carefully and use the all included components on it's proper place.
- This mechanism has several static and dynamic balance factors according to basic hinge types. This is why selecting of correct product model is quite important. There are 4 main type according the total weight of frame and mattress. *Please don't hesitate to contact our customer support department destek@erhun.com.tr, 0..... if necessary.*
- Please use code generating steps which is shown on page #1 in order to get desired color and correct support bar length.
- In case of blockage of bed while opening remove the mattress, release the lock system manually and lift the bed.
- Don't use any abrasive material and or solvents on active arm body. Don't scratch or remove the paint.
- First opening may not proper works in order to gas flow in springs. Try to open and close 4-5 times to let the system balance itself.
- Try to keep mechanism from dust, humidity, soaps and water.

     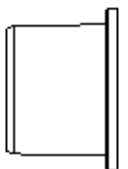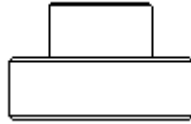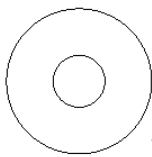  2 Person is necessary for setup the bed	 2 pcs. pre assembled group (L+R)		 #29+#30 M6x10+Washer x8	 <i>Fix Bracket Fastener</i> M8x20+Washer x10
	 1 Front (FR)+ 1 Rear (RR) Support bar #2+#19		 1/4"x2.33" <i>Frame Fastener</i> screw+washer+nut x8	 #33+#34 M8x16+Washer x4
 #22 POM Bushing x 8	 #4 POM Bushing x 2	 #32 M8 POM wearing discx2	 #31 M8x16mmx4 Short Thread Length	 Fixed Bracket x 2 (L+R)